


PROCUT 315 & 350 CIRCULAR SAW




Spare Parts Manual


PARTS LISTS

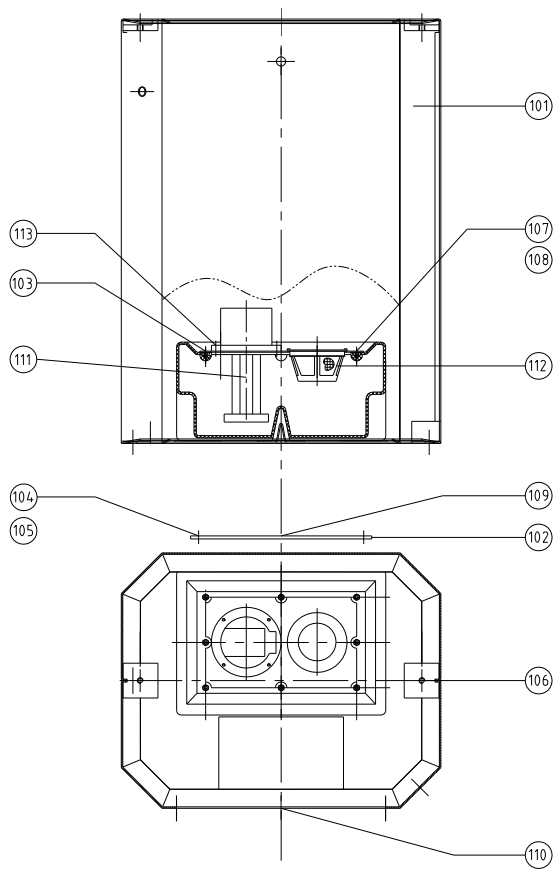


Part No.	Description	Qty.	Part No.	Description	Qty.
101	Pedestal	1	109	Sticker electro	1
102	cover	1	110	Sticker general	1
103	support pump	1	111	Pump set 230/40QV50HZ	1
104	screw 6 x 12	4	112	Filter	1
105	Spring washer 6	6	113	Screw M6x12	
106	Screw M10 x 100	2			
107	Screw M6 x 12	2			
108	Spring washer 8	2			

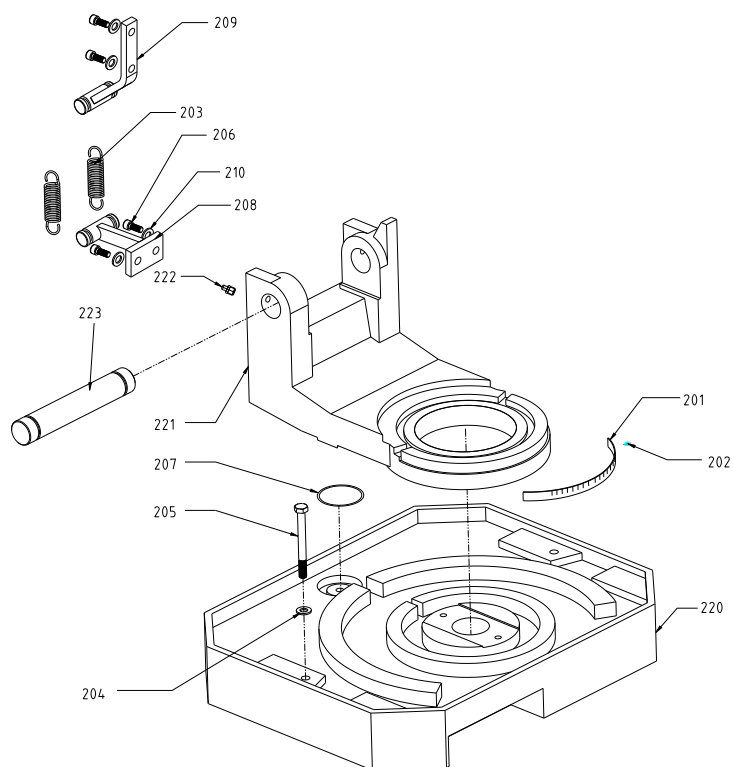


Part No.	Description	Qty.
201	Angel Scale	1
202	Type Shield	2
203	Spring	2
204	Rivet 10	2
205	Screw M10x100	2
206	Nut M10X25	4
207	Filter	1
208	Spring fixed plate	1
209	Spring fixed plate	1
210	Washer	4
220	Base plate	1
221	Swivel block	1
222	Greasing nipple	2
223	Shaft	1

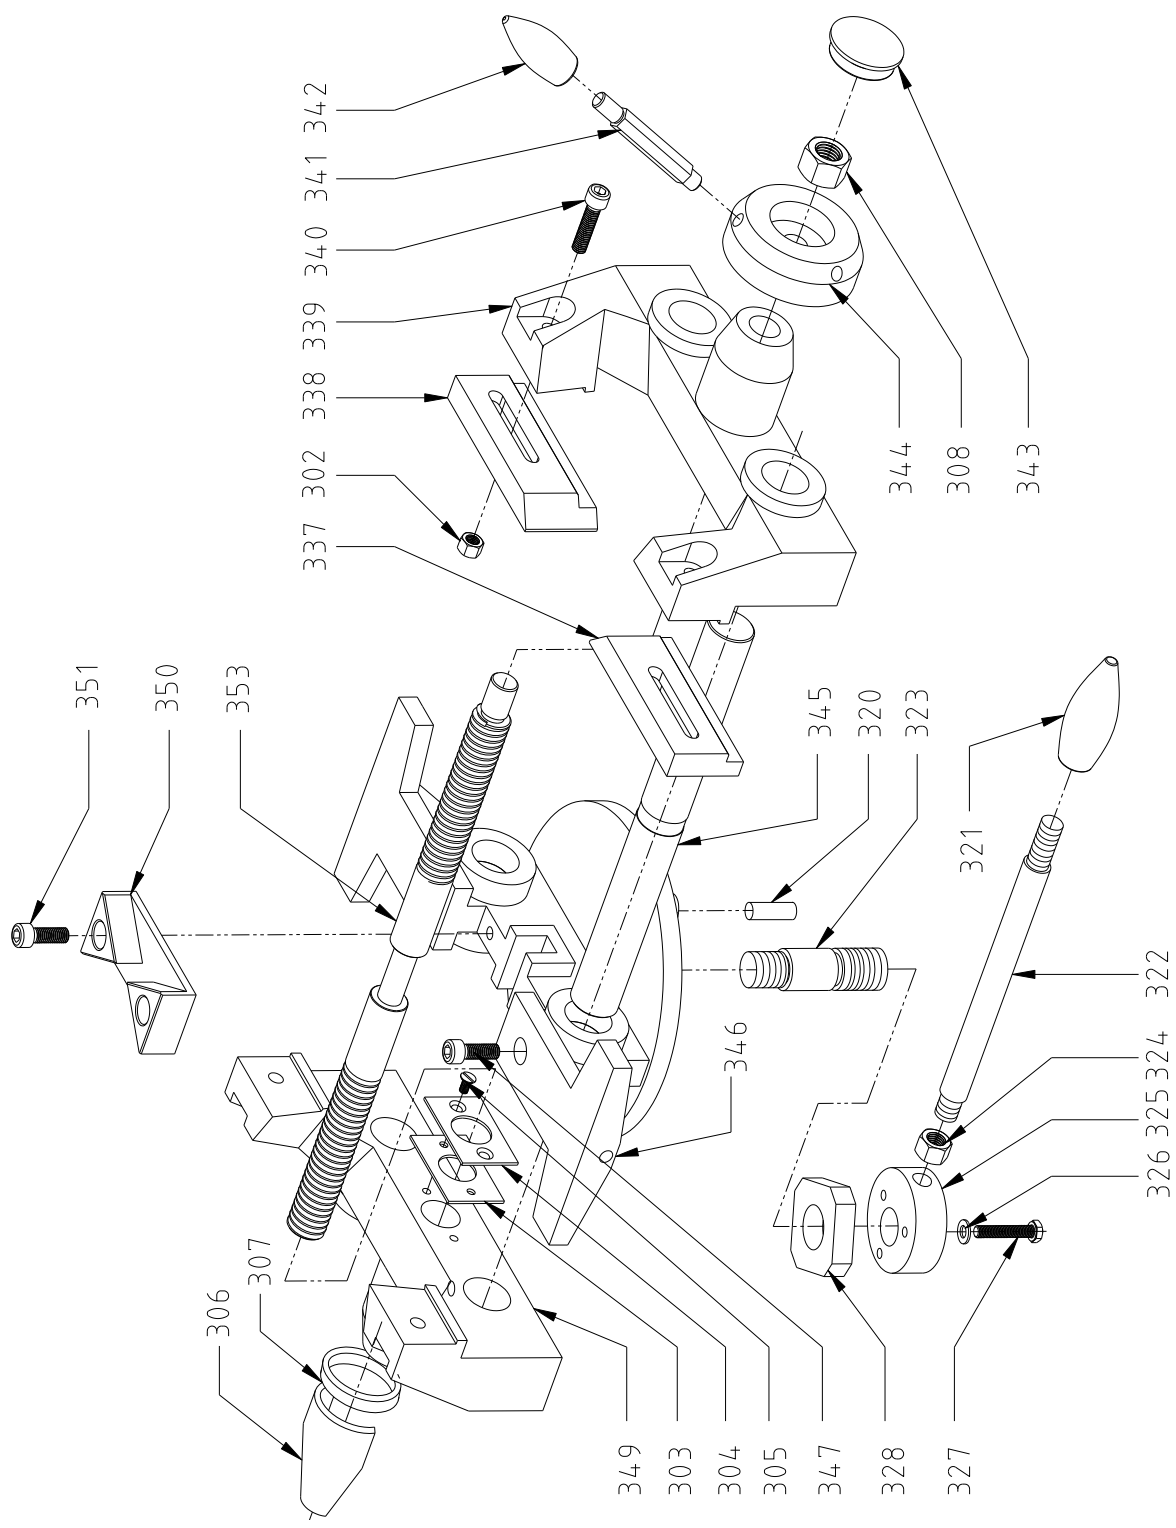


Part No.	Description	Qty.	Part No.	Description	Qty.
302	Nut M10	4	337	Vice plate left	2
303	Ring	2	338	Vice plate right	2
304	Mat board	2	339	Vice jaw at the front	1
305	Bolt	4	340	Socket screw	4
306	Rubber cover	1	341	Handle rod+knob	3
307	Pipe hoop	1	342	Knob	3
308	Nut	1	343	Plastic cover knob	1
320	Pin	2	344	Boss	1
321	Knob	1	345	Guiding shaft	2
322	Mitre handle complete	1	346	Vice base	1
323	Stud	1	347	Socket screw	2
324	Nut	1	349	Vice jaw at the back	1
325	Tensioning nut	1	350	Support block	
326	Nut	3	351	Socket Screw	2
327	Bolt	3	353	Threaded shaft	1
328	Pressure plate	1			

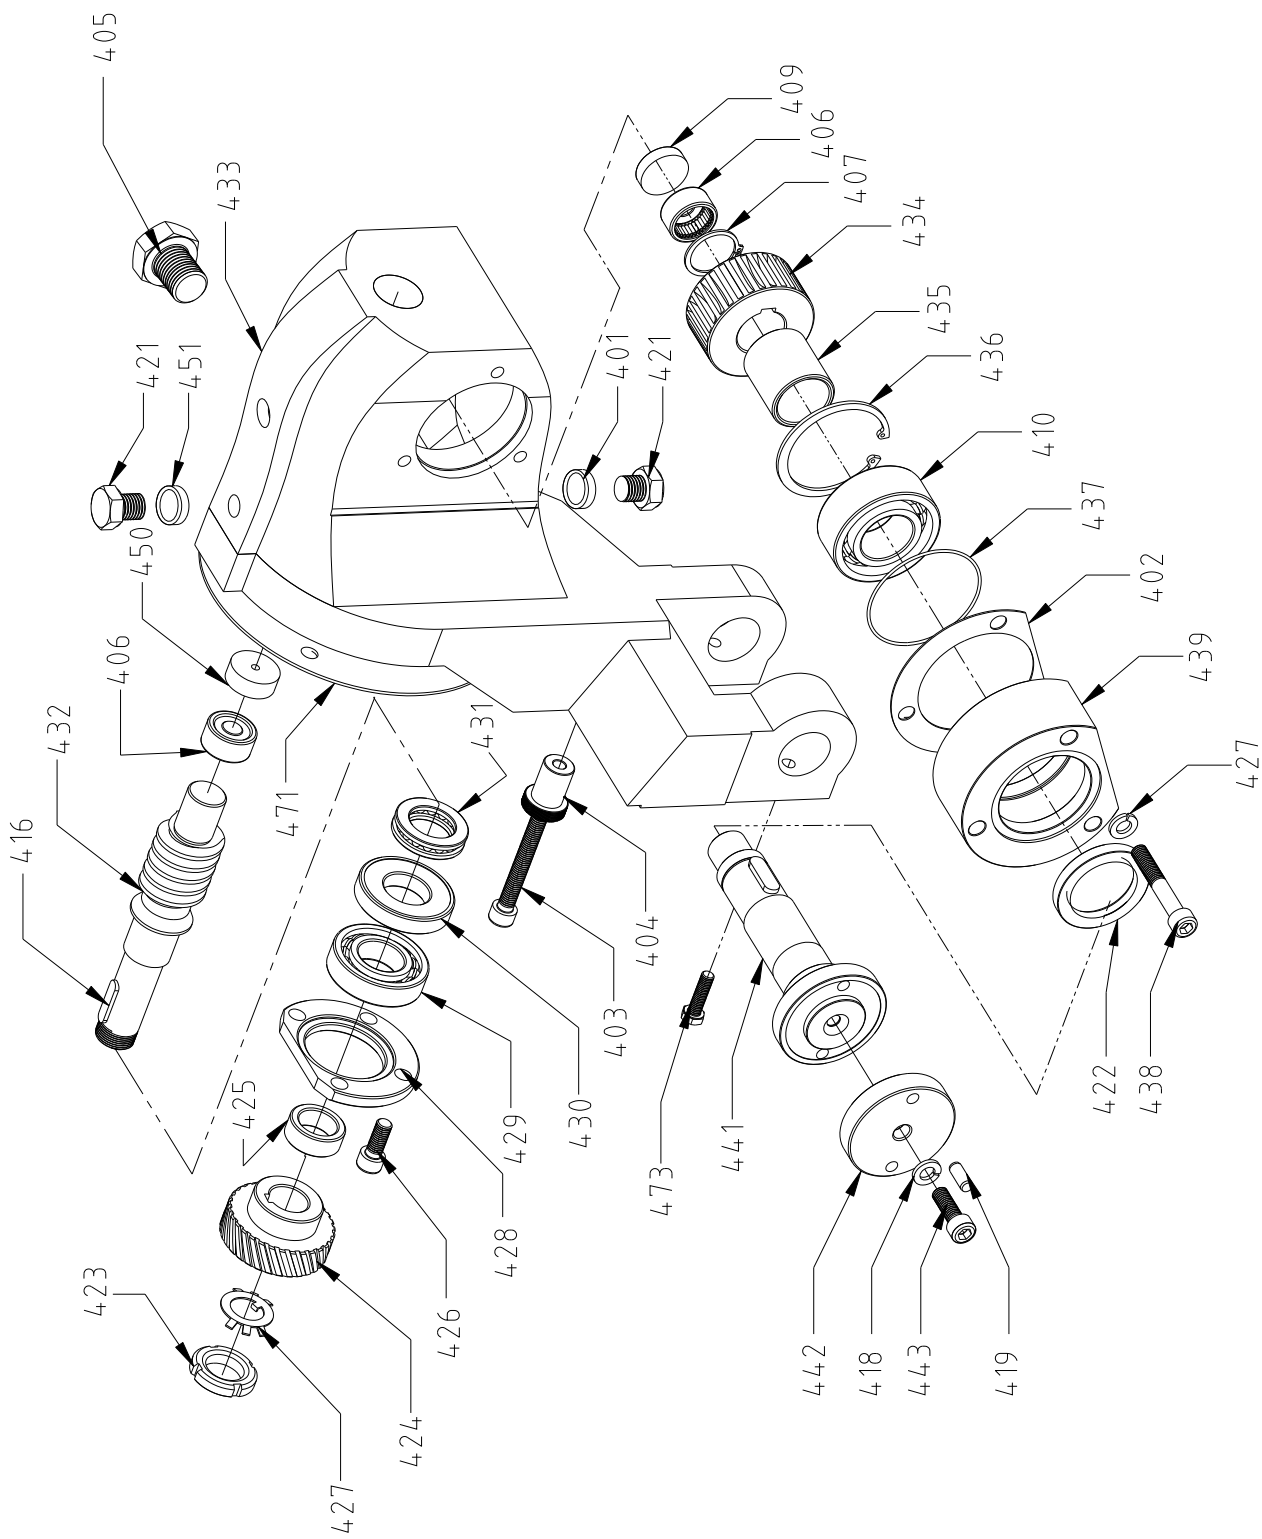


Part No	Description	Qty.	Part No.	Description	Qty.
401	Ring	1	428	Locking ring	1
402	Push down seat	1	429	Bearing	1
403	Bolt	1	430	Ring	1
404	Nut	1	431	Bearing	1
405	Oil mark	2	432	Worm shaft	1
406	Needle bearing	1	433	Gear housing 350	1
407	Circlip	1	434	Worm wheel	1
409	Stopper stifled	1	435	Bush	1
410	Bearing	1	436	Circlip	1
416	Sunken key	1	437	O-ring	1
418	Ring	1	438	Socket screw	3
419	Dowel pin	2	439	Bearing block	1
421	Drain catcher	1	440	Sunken key	1
422	Oil catcher	1	441	Saw shaft	1
423	Nut	1	443	Socket screw	1
424	Gear	1	450	Stopper stifled	1
425	Spacer ring	1	451	Ring	1
426	Socket screw	4	471	Packing	1
427	Stop ring	1	473	Screw	2

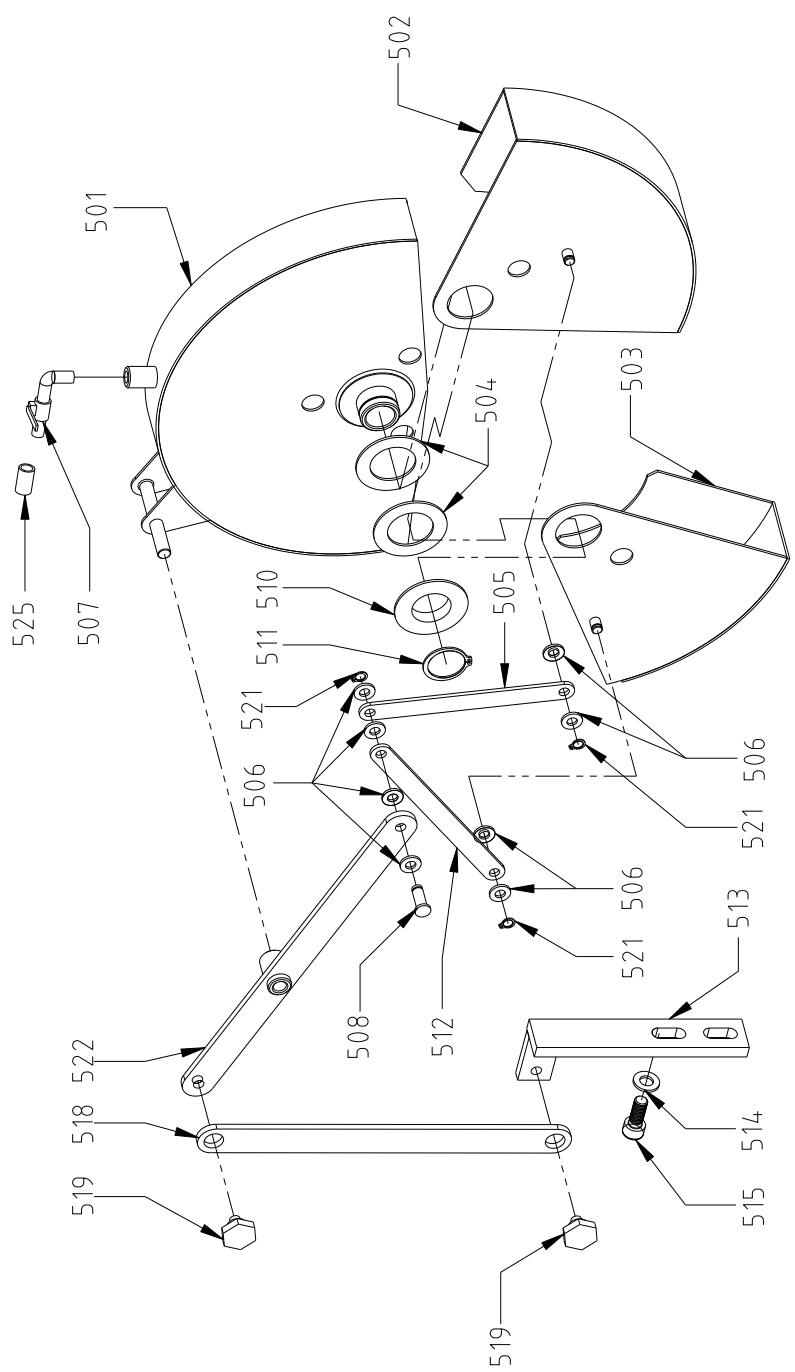

Part No	Description	Qty.	Part No.	Description	Qty.
501	Safety guard	1	512	Coupling rod	1
502	Hinged guard	1	513	Bracket	1
503	Hinged guard	1	514	Ring	2
504	Ring	1	515	Socket head screw	1
505	Coupling rod	1	518	Lever	1
506	Ring	8	519	Star knob	2
507	Tap (cock)	1	521	Adjusting rod	3
508	Spindle	1	522	Coupling rod	1
510	Bush	1	525	Connecting pipe	1
511	Circlip	1			

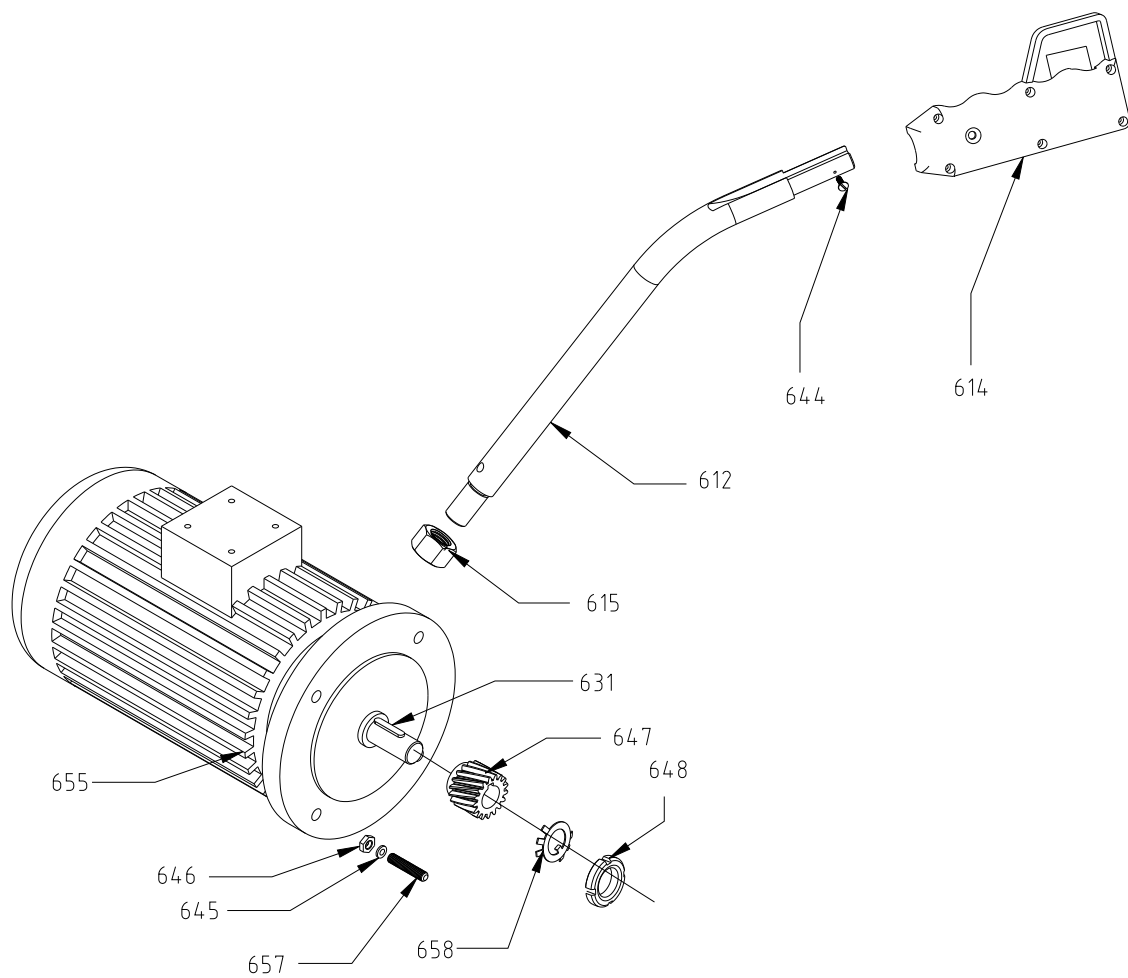

Part No	Description	Qty.	Part No.	Description	Qty.
612	Tie bar complete	1	646	Nut	4
614	Switch handle	1	647	Pinion	1
615	Nut	1	648	Lock nut	1
631	Sunken key	1	655	Motor	1
644	Screw	2	657	Bolt	1
645	Ring	4	658	Stop ring	1

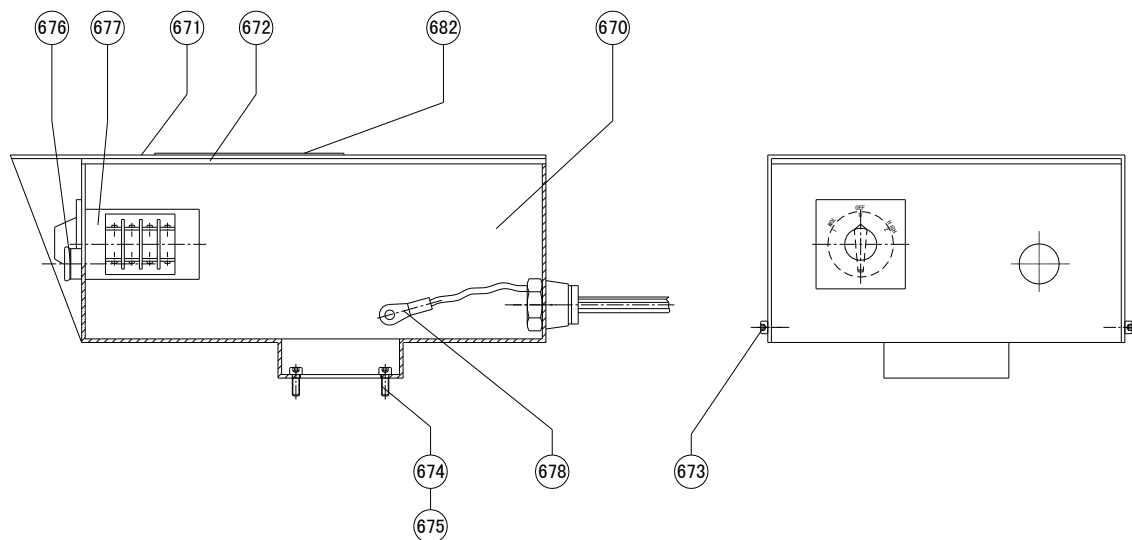

Part No	Description	Qty
670	Switch box	1
671	Cover	1
672	Sealing tape	
673	Screw M4x10	4
674	Screw M5x12	4
675	Spring washer	4
677	Motor switch contactor (Dahlander switch)	1
678	Earth bolt	1
682	Sticker	1

Note: This manual is only for your reference. Owing to the continuous improvement of the machine, changes may be made at any time without obligation on notice.